


**TO BE USED BY AUTHORISED PERSONNEL ONLY**

## **CAUTION - STEAM CAN BURN**

### **USE IN A SAFE PLACE**

- Well-ventilated area
- Level floor
- Clear of clutter
- No trailing cable
- Away from walkways and children
- Away from smoke detectors

### **FILL WITH TAP WATER ONLY**

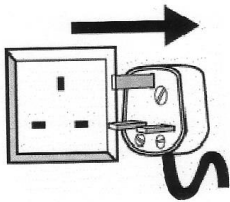

- SWITCH OFF
- DISCONNECT POWER SUPPLY



- USE FUNNEL AND DO NOT OVERFILL
- MOP UP SPILLAGES BEFORE CONNECTING POWER SUPPLY


**ENSURE FILLER CAP IS FITTED TO WATER INLET COUPLING WITH CORRESPONDING GRAPHIC BEFORE SWITCHING ON.**



**DO NOT STEAM CLOTHES ON YOURSELF OR OTHERS**



**KEEP HOLES IN NOZZLE POINTING UPWARDS**

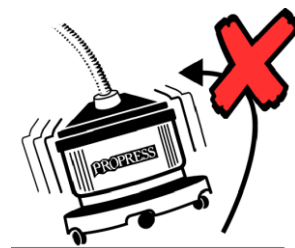

**DO NOT TILT OR CARRY MACHINE WHEN IN USE**

- DO NOT TWIST OR KINK HOSE
- NEVER LEAVE HOSE ON THE FLOOR
- NEVER LEAVE MACHINE STEAMING UNATTENDED
- ONLY REFILL WHEN WARNING LIGHT INDICATES EMPTY

**SWITCH OFF IF STEAM ESCAPES FROM FILLER CAP AND CONSULT INSTRUCTION MANUAL**

**CUSTOMER SERVICE LINE : 020 8417 0660**